# AFL Series INSTRUCTION MANUAL

DRW180852AB

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily. The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice. Follow Autonics website for the latest information.

#### Safety Considerations

Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

 <u>A</u> symbol indicates caution due to special circumstances in which hazards may occur.

**Warning** Failure to follow instructions may result in serious injury or death.

- **01.** Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not connect, repair, or inspect the unit, or remove connector while connected to a power source. Failure to follow this instruction may result in fire or electric shock.

**04. Do not disassemble or modify the unit.** 

Failure to follow this instruction may result in fire or electric shock.

**Caution** Failure to follow instructions may result in injury or product damage.

#### 01. Use the unit within the rated specifications.

- Failure to follow this instruction may result in fire or product damage. **02. Use dry cloth to clean the unit, and do not use water or organic solvent.**
- Failure to follow this instruction may result in fire or electric shock.03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.

Failure to follow this instruction may result in fire or product damage.

#### **Cautions during Use**

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications') - Altitude max. 2.000m
- Pollution degree 2
- Installation category II

## Ordering Information

This is only for reference. For selecting the specific model follow the Autonics web site

To selecting the specific model, follow the Automics web site.						
AFL - H <b>O O</b> -	8 4					
O The number of connector pin 20: 20-pin 26: 26-pin 40: 40-pin 50: 50-pin	€ Indicator No-mark: no LED L: LED equipped					
© Connector No-mark: HIF3BA, XG4A-2031, XG4A-2631 B: HIF3BB	<b>④ Input logic</b> No-mark: None N: NPN P: PNP					


# Sold Separately

I/O cable

Specifications								
Model	AFL-H20	AFL-H26	AFL-H4	40	AFL-H50	AFL-H50B		
The number of connector pin	20	26	40		50	50		
The number of terminal	20	26	40		50	50		
Terminaltype	Screwless	Screwless	Screwle	ess	Screwless	Screwless		
Terminal pitch	5.0 mm	5.0 mm	5.0 mm		5.0 mm	5.0 mm		
Connector for controller side	20-pin Omron (XG4A-2031)	26-pin Omron (XG4A-2631)	40-pin Hirose (HIF3BA-40PA- 54DSA)		50-pin Hirose (HIF3BA-50PA- 2.54DSA)	50-pin Hirose (HIF3BB-50PA- 2.54DSA)		
Material	Case, Base: PC							
Approval								
Unit weight (packaged)	≈ 48.5 g (≈ 86.2 g)	≈ 60 g (≈ 89 g)	≈ 89 g (≈ 156	g)	≈ 110 g (≈ 177 g)	≈ 110 g (≈ 177 g)		
Model	AFL-H20-LN,	AFI -H20-I P	AFL-H		40-LN,AFL-H4	0-I P		
The number of connector pin	20			40				
The number of terminal	16 <sup>01)</sup>			32 02)				
Terminaltype	Screwless		Screwl		ess			
Terminal pitch	5.0 mm			5.0 mm				
Connector for controller side	20-pin Omron			40-pin	Hirose (HIF3BA-40PA-2.54DSA)			
Input logic	NPN/PNP mod	del						
Indicator	Power indicator: red, operation indicator: blue							
Material	Case, Base: PC							
Approval	C € c®uura							
Unit weight (packaged)	≈ 48.6 g (≈ 86.3 g)			≈ 91 g (≈ 158	g)			
01) Four terminals an 02) Eight terminals ar					ot Connectred) ter	minals.		
Rated voltage <sup>01)</sup>	Basic model: ≤ 125 VDC=, 125 VAC~ 50/60 Hz Indicator equipped model: ≤ 24 VDC== ± 10%							
Rated current	≤1A							
Insulation resistance	≥ 1,000 MΩ (500 VDC== megger)							
Dielectric strength	2,700 VAC~ 50/60 Hz for 1 minute							
Vibration	0.75 mm amplitude at frequency of 10 to 55 Hz (for 1 minute) in each X, Y, Z direction for 2 hours							
Vibration (malfunction)	0.75 mm amplitude at frequency of 10 to 55 Hz (for 1 minute) in each X, Y, Z direction for 10 minutes							
Shock	150 m/s² (≈ 15	G) in each X, Y,	Z directi	ion for 3	times			
Shock (malfunction)	$100 \text{ m/s}^2 ~(\approx 10 \text{ G})$ in each X, Y, Z direction for 3 times							
Ambient	-15 to 55 °C, storage: -25 to 65 °C							
temperature Ambient	(a non freezing or condensation environment) 35 to 85 %RH, storage: 35 to 85 %RH							
humidity Protection	(a non freezing or condensation environment) IP20 (IEC standard)							
01) When connecting	loads to output pa	-	f same po	wer type.	Connecting loads	of different power		
type may cause sa Applicable wire - solid <sup>01)</sup>	Ø 0.3 to 1.2 mm	1						
- solid <sup>01)</sup> Applicable wire - stranded <sup>01) 02)</sup>								
Wire ferrule connection	AWG 22-16 (0.30 to 1.25 mm <sup>2</sup> ) ≥ 30 N							
tensile strength	0. 10							
Stripped length								
<ul><li>01) Use the cable of co</li><li>02) When using the si</li></ul>								


# Wire Ferrule Specifications




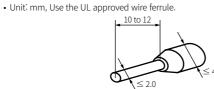

#### Dimensions

• Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

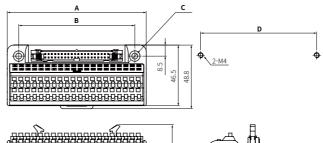

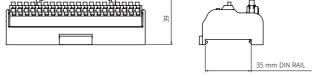

	Α	В	С	D
20-pin	57.5	53	2-Ø4.2	53
26-pin	72.5	64	2-Ø4.2	64
40-pin	106.5	89	2-Ø4.5	89
50-pin	131.5	102	2-Ø4.5	102


### Installation

#### DIN RAIL

Mounting

1. Pull the Rail lock on the rear of the product to the direction ①. 2. Hang DIN rail hook on the rear of the product onto DIN rail.

 Push the product to the direction ②, and push the Rail lock to the direction ③ to fix onto the DIN rail.

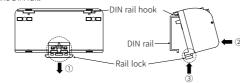


Removing

1. Insert a tool such as screwdriver into the hole of Rail lock.

2. Push the toll to the direction ① and pull the Rail lock.

3. Lift bottom of the product to the direction (2) and remove the product from DIN rail.

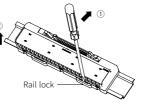

#### Panel

Product with the mounting hole can be installed on panel with screw. It is recommended to use M4 $\times$ 25 mm of spring washer screws. If you use flat washer, its diameter should be Ø 8 mm. Tighten the screw with the tightening torque of 0.7 to 1.0 N  $\cdot$  m. Mounting hole



#### Wiring

Connecting

Insert the wire ferrule into the terminal hole.

Removing

- 1. Put the (-) screwdriver at the groove on the clamp lever
- and press it.
- 2. Pull the cable to disassemble



# Wire Connection

#### Wire connection

Basic model

